PaRo™

TECHNOLOGIES

PRODUCT CATALOGUE

HORTICULTURAL LIGHTING



paro-lampa.pl

LIGHTING TECHNOLOGY FOR A NEW GENERATION

PaRo Technologies offers professional LED lighting systems for indoor and greenhouse cultivation. The SQUARE and SLIM families combine two spectrum variants - 23% and 36% Green - with three control levels: Basic, Pro and Ultra. A key PARO technology is Frequency Spectrum Technology (FST), available in Pro and Ultra, which controls the cyclical delivery of light.

The modular design lets you upgrade the system by replacing the driver, without replacing the entire light. It is a solution for B2B customers who want to match their lighting configuration to their facility and future investment stages.

CONTENTS

01	PARO SQUARE / INDOOR	3
02	PARO SLIM / GREENHOUSE	4
03	GREEN SPECTRUM 23% / 36%	5
04	23% GREEN LED CONFIGURATION	6
05	36% GREEN LED CONFIGURATION	7
06	FREQUENCY SPECTRUM TECHNOLOGY (FST)	8
07	BASIC / PRO / ULTRA	9–10
08	FST OPERATING MODES AND TIMER	11
09	WIRELESS CONTROL	12
10	SYNCHRONISATION AND GROUPING	13–14
11	15 SPECTRAL PROFILES	15
12	LIGHTING FAMILY COMPARISON	16
13	SQUARE SPECIFICATIONS	17
14	SLIM SPECIFICATIONS	18
15	SQUARE ASSEMBLY	19
16	SAFETY AND MAINTENANCE	20
17	CONTACT AND B2B PARTNERSHIPS	21

01 / INDOOR LIGHTING

PaRo SQUARE Series

Modular lighting systems for enclosed growing environments.



SQUARE family illustration - construction details vary by model.

POWER TO MATCH YOUR SPACE

600 W	800 W	1000 W	1200 W	1500 W	1800 W

GREEN SPECTRUM

23% Green / 36% Green

Two spectrum variants

CONTROL

Basic / Pro / Ultra

Three driver versions

ONE FAMILY. MODULAR DESIGN.

For grow tents and professional indoor installations. Upgrade the system by replacing the appropriate driver, without replacing the entire light.

02 / GREENHOUSE LIGHTING

PaRo SLIM Series

An elongated, modular design for professional greenhouse cultivation.



SLIM family illustration - construction details vary by model.

POWER TO MATCH YOUR SPACE

600 W	800 W	1000 W	1200 W	1500 W	1800 W

GREEN SPECTRUM

23% Green / 36% Green

Two spectrum variants

CONTROL

Basic / Pro / Ultra

Three driver versions

ONE FAMILY. MODULAR DESIGN.

For greenhouses, polytunnels and professional greenhouse cultivation. Upgrade the system by replacing the appropriate driver, without replacing the entire light.

03 / LIGHT ARCHITECTURE

GREEN SPECTRUM

23% VS 36%

Two spectrum configurations. One PARO technology platform.

23%

GREEN SPECTRUM

The PARO variant with a lower green-light share and greater emphasis on selected blue and red channels.

- 3000 K
- 6000 K
- 1800 K
- **Blue 450 nm**
- Deep Red 660 nm
- IR 740 nm
- UV 396 nm

DEDICATED BLUE 450 nm CHANNEL

UV 396 nm

36%

GREEN SPECTRUM

A variant with a higher green-light share and a different balance of spectral components.

- 3000 K
- 6000 K
- 1800 K
- Deep Red 660 nm
- IR 740 nm
- UV 395 nm

NO DEDICATED BLUE 450 nm

UV 395 nm

Channel labels are illustrative - they are not a measured SPD chart.

AN IMPORTANT DISTINCTION

The absence of a dedicated Blue 450 nm LED in 36% Green does not mean that the emitted spectrum contains no blue light.

Both variants are available in the SQUARE and SLIM families.

04 / LED CONFIGURATIONS

GREEN SPECTRUM 23%

LED ARCHITECTURE

SEVEN CHANNELS. SIX POWER OPTIONS.
PRECISE LIGHT CONFIGURATION.

A shared configuration for SQUARE and SLIM. Exact LED counts by channel and power rating.

LED CHANNEL / QTY	600 W	800 W	1000 W	1200 W	1500 W	1800 W
3000 K	810	1080	1350	1620	2160	2592
6000 K	810	1080	1350	1620	2160	2592
1800 K	402	536	670	804	1020	1224
Blue 450 nm	162	216	270	324	540	648
Deep Red 660 nm	276	368	460	552	1400	1680
IR 740 nm	12	16	20	24	80	96
UV 396 nm	72	96	120	144	200	240
TOTAL LED COUNT	**2544**	**3392**	**4240**	**5088**	**7560**	**9072**

LED counts are identical for SQUARE and SLIM at the same power rating.

DEDICATED BLUE 450 nm

A dedicated blue channel distinguishes the 23% Green variant. It complements the white and red channels in shaping the light spectrum.

SEVEN SPECTRAL COMPONENTS

The 3000 K and 6000 K white channels and very warm 1800 K channel form the spectral base. Blue, Deep Red, IR and UV add the specified wavelength ranges.

23% Green describes the share of green light in the spectrum, not the percentage of green LEDs. Coloured markers identify channels; they are not a measured chart.

05 / LED CONFIGURATIONS

GREEN SPECTRUM 36%

LED ARCHITECTURE

SIX CHANNELS. SIX POWER OPTIONS.
PRECISE LIGHT CONFIGURATION.

A shared configuration for SQUARE and SLIM. Exact LED counts by channel and power rating.

LED CHANNEL / QTY	600 W	800 W	1000 W	1200 W	1500 W	1800 W
3000 K	972	1296	1620	1944	2160	2592
6000 K	972	1296	1620	1944	2700	3240
1800 K	240	320	400	480	1020	1224
Deep Red 660 nm	276	368	460	552	1400	1680
IR 740 nm	12	16	20	24	80	96
UV 395 nm	72	96	120	144	200	240
TOTAL LED COUNT	**2544**	**3392**	**4240**	**5088**	**7560**	**9072**

LED counts are identical for SQUARE and SLIM at the same power rating.

NO DEDICATED BLUE 450 nm

The 36% Green variant has no dedicated Blue 450 nm channel. Blue wavelengths are still present in the light emitted by the white LEDs.

DISTINCT ARCHITECTURE. 15 PROFILES.

One of two Green Spectrum configurations, compatible with 15 spectral profiles. It differs from 23% Green in its green-light share and LED channel configuration.

36% Green describes the share of green light in the spectrum, not the percentage of green LEDs. Coloured markers identify channels; they are not a measured chart.

06 / FREQUENCY-BASED TECHNOLOGY

FREQUENCY SPECTRUM TECHNOLOGY

INTELLIGENT LIGHT DELIVERY

A specially programmed driver implements the selected mode, delivering light continuously or in repeated ACTIVE / REST phases. FST adds time-based light control to the PARO platform.

TWO WAYS TO DELIVER LIGHT

CONTINUOUS OPERATION - N MODE

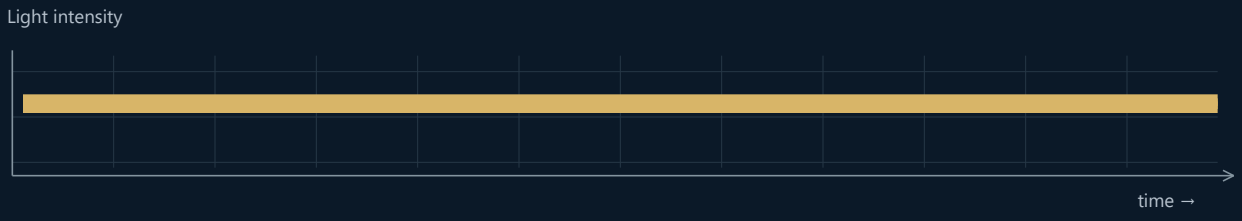

FREQUENCY-BASED OPERATION - FST

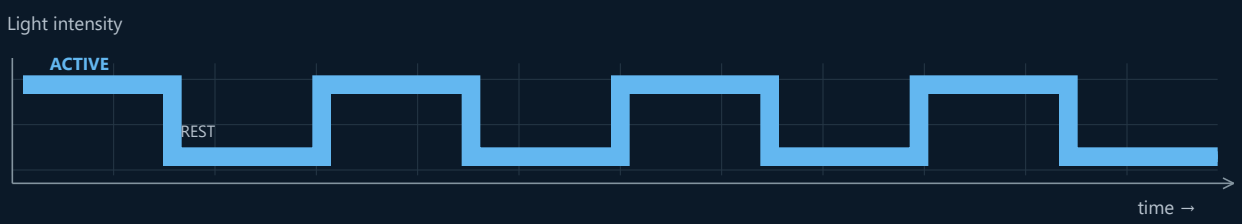

CONCEPT DIAGRAM - NOT A MEASUREMENT.

Not to scale: the diagram does not specify frequency, amplitude or phase duration.

PRO

P MODE / E MODE / H MODE

P - performance mode
E - energy saving
H - combines performance and energy saving

ULTRA

U MODE / E MODE / H MODE

U - Ultra performance mode
E - energy saving
H - combines performance and energy saving

BASIC: standard continuous N operation. Pro and Ultra also offer N Mode.

SPECTRAL PROFILE ≠ OPERATING MODE

The spectral profile defines the composition of the light. The mode defines its delivery over time: the driver runs the programme while retaining the selected profile.

FST does not guarantee a specific yield increase. Results depend on growing conditions.

07 / CONTROL ARCHITECTURE

BASIC / PRO / ULTRA

THREE VERSIONS. AN INFORMED CHOICE.

BASIC





Simple power and spectrum control.

Continuous operation; DIMMING 10-100% and 15 SPECTRUM profiles. No selectable FST modes or built-in timer.

For independent power and profile adjustment, with the option to upgrade later.

PRO





Performance and energy-saving modes.

N / P / E / H. Power adjustment, 15 profiles, built-in TIMER, SYNC and external Wireless Control support.

Choose performance, energy saving or a combination of both.

ULTRA





Extended FST capabilities.

N / U / E / H. Power adjustment, 15 profiles, built-in TIMER, SYNC and external Wireless Control support.

U Mode and distinct E and H benefits. Compare modes on the next page.

1200 W drivers and front-panel close-ups; the Ultra image shows two units.

WHAT DO PRO AND ULTRA OFFER?

TIMER

Schedules light-on and off periods in 2 or 4 stages. It is an operating schedule, not another FST mode.

SYNC

Control lights in a matching group from a Pro or Ultra driver, without an external controller.

WIRELESS CONTROL

A separate, compatible controller for shared power, profile, mode and timing settings across groups of lights.

PROFILE ≠ OPERATING MODE

SPECTRUM selects the spectral profile, AI selects the driver mode, and DIMMING adjusts power.

MODULAR UPGRADES - move from Basic to Pro or Ultra by replacing the appropriate driver, without replacing the entire light. The driver must match the model and LED configuration.

07 / CONTROL ARCHITECTURE

MODES AND THEIR BENEFITS

PRO AND ULTRA - FEATURES AND DECLARED EFFECTS.

N is continuous operation and the reference mode. Pro modes P / E / H and Ultra modes U / E / H use Frequency Spectrum Technology.

PRO — N / P / E / H

N / CONTINUOUS OPERATION

Standard operation. No additional declared yield increase or energy savings.

P / PERFORMANCE

Declared yield increase of 10-30%.
Enhanced performance mode for Pro.

E / ENERGY SAVING

Up to 30% energy savings while maintaining yields at Basic level, according to the manufacturer.

H / HYBRID MODE

Versus N: a declared yield increase of 5-15% and approximately 15% energy savings.

ULTRA — N / U / E / H

N / CONTINUOUS OPERATION

The reference for U, E and H. May be used alongside other lights.

U / ULTRA PERFORMANCE

Declared yield increase of 20-50% versus N. Higher instantaneous PPFD during the active phase at rated power.

E / ENERGY SAVING

Power consumption of approximately 50% of N Mode, with comparable growing results, according to the manufacturer.

H / HYBRID MODE

Versus N: a declared yield increase of 10-25% and approximately 25% savings. Power consumption is about 75% of N.

Manufacturer declarations, not guaranteed results. Yield increases and energy savings depend on variety, environment, configuration and cultivation practices. Pro and Ultra values are not interchangeable.

ULTRA - IMPORTANT USAGE GUIDELINES

• U, E and H: do not use during cloning or rooting of cuttings. Intended for a separate zone, without lights from other manufacturers.
• U: when growing from seed, activate only after at least three leaves have developed. If leaves droop, reduce the power setting.
• N: continuous operation, compatible with other lights. Flicker seen on camera in U Mode results from frequency-based operation.

The three-leaf rule applies to U Mode, not to E or H. TIMER schedules time; spectral profile and operating mode are separate settings.

OPERATING MODES AND TIMER

HOW LIGHT IS DELIVERED.
INDEPENDENT TIME PROGRAMMING.

The operating mode defines how light is delivered over time.
TIMER schedules light-on and off periods - it is not an FST mode.

PRO

N / P / E / H

N - continuous operation
P - performance mode
E - energy saving
H - hybrid mode

FST: P, E and H.

ULTRA

N / U / E / H

N - continuous operation
U - Ultra performance mode
E - energy saving
H - hybrid mode

FST: U, E and H.

AI selects the operating mode. SPECTRUM independently selects one of 15 spectral profiles.
Basic operates continuously, with no selectable FST modes or built-in timer.

TIMER

PROGRAMMING LIGHT-ON AND OFF PERIODS

Built into Pro and Ultra drivers. Set directly using the driver buttons.
Two programming methods - example settings from the PARO instructions follow.

2 STAGES

18 h on → 6 h off

Blue + red: hold for 5 s, then release. Use the red button to reduce 24 to 18 (-1 h per press). After 5 s without pressing a button, the countdown begins.

4 STAGES

3 h on → 9 h off → 6 h on → 6 h off

Blue + green: hold for 5 s. Use green to set N1: 3 h, F1: 9 h, N2: 6 h. Wait 5 s between settings; after N2, the countdown starts following 5 s without a button press.

The second 6 h off period belongs to this example. The instructions do not describe setting it manually. These cycles are not recommendations for every crop.

TIMER IN WIRELESS CONTROL

The external controller allows time programming for a compatible system.
The button sequences above apply to Pro and Ultra drivers, not to the controller.

09 / INTELLIGENT CONTROL

PARO WIRELESS CONTROL

WIRELESS CONTROL OF PROFESSIONAL LED INSTALLATIONS

Manage multiple lights from one controller. Adjust lighting for a selected group or all groups in a compatible PARO installation.



WIRELESS CONTROLLER

01 / WIRELESS CONTROL

The controller works with compatible Pro and Ultra drivers. It is a separate system device.

02 / GROUPS AND SHARED SETTINGS

Matching group numbers enable shared control of lights. Mode 888 covers all groups.

03 / POWER, PROFILES AND MODES

Adjust power, choose from 15 spectral profiles and use the modes available in your light version.

04 / TIME PROGRAMMING

TIMER lets you schedule lighting operation and organise your installation.

SYSTEM ARCHITECTURE

CONTROLLER **WIRELESS** → COMPATIBLE DRIVERS **PRO / ULTRA** → LIGHT GROUPS **PARO**

The external Wireless controller, driver SYNC and wired synchronisation are separate control methods. Their parameters are not interchangeable.

10 / OPERATION AND SYNCHRONISATION

PRO / ULTRA DRIVER

Practical use of buttons and knobs.
Operating mode, spectral profile and power are three independent settings.

01 / BLUE AI - MODE SELECTION

Use AI to select a mode supported by your driver:
PRO: N / P / E / H. ULTRA: N / U / E / H.
N means continuous operation; P or U - performance; E - energy saving; H - hybrid.
Benefits and usage guidelines: page 10.

02 / SPECTRUM AND DIMMING - TWO KNOBS

SPECTRUM: select one of 15 preset spectral profiles.
DIMMING: adjust lighting power.
Changing the profile does not select mode N, P, U, E or H.

03 / BLACK SYNC - CONTROL FROM THE LIGHT

Set matching group numbers on the lights you want to control together. Any light in that group can act as the main unit.
Press black SYNC on the selected driver. The last display digit will flash. Synchronisation remains active for 10 minutes. Press SYNC again to reactivate it.
This is the synchronisation window, not the lighting duration or a timer setting.

04 / GROUP+ AND GROUP− - GROUP SELECTION

Green Group+ increases the group number. Red Group− decreases it. The display shows the selected number.
Devices intended for shared control must have matching group numbers. After 5 minutes of inactivity, the display turns off; any button wakes it again.

Built-in Pro and Ultra TIMER: full two- and four-stage procedures on page 11. Basic has no SYNC buttons or built-in timer.

GROUPS AND CONTROLLER

Driver control, external Wireless Control and wired connections are separate methods. Their limitations are not interchangeable.

05 / MODE 888 - ALL GROUPS

On a Pro or Ultra driver, hold Group+ and Group− together for 3 seconds to activate mode 888, covering all groups.
To exit, press Group+ or Group−. Mode 888 defines the control scope; it is not an FST mode or timer programme.

06 / EXTERNAL WIRELESS CONTROL

1. Select a group. Set the controller to the same group number as the lights you want to control. Different numbers prevent control of that group.
2. Select a setting. DIMMING adjusts power, SPECTRUM selects the profile, MODE selects a mode supported by the driver, and TIMER schedules operation.
3. Control together. Settings apply to the selected group; 888 covers all groups. Pro supports N / P / E / H; Ultra supports N / U / E / H.

Wireless Control is a separate device for compatible Pro and Ultra drivers.

The SYNC, Group+/Group− and timer button sequences described for drivers are not external-controller button instructions. Refer to the device manual for detailed controller operation.

07 / WIRED SYNCHRONISATION

Requires compatible installation components and the appropriate wired connection. The 30-device limit applies only to this method, not to Wireless groups or driver SYNC.
Verify connector selection and compatibility for the specific devices. A grouping diagram does not replace electrical connection instructions.

Control and synchronisation functions are described for the PARO Pro and Ultra system.

15 SPECTRAL PROFILES

ONE PLATFORM. FIFTEEN WAYS TO SHAPE LIGHT.

A profile is a preset spectral composition. Fifteen settings let you change the light characteristics without replacing the light, matching them to the stage and purpose of cultivation.

01 VEG start
Start of the cycle: root and first-leaf development.

02 VEG root
Root development and establishment of young plants.

03 VEG structure
Stem and leaf development; may be reused near the end of the cycle.

04 VEG build
Vegetative growth and stronger plant structure.

05 VEG power
Vegetative growth and preparation for pre-flower.

06 Pre-flower
Transition from vegetative growth to flower initiation.

07 Flower start
Onset of flowering and flower initiation.

08 Flower build
Flower development and mass building.

09 Flower mass
Mass building during mid-flowering.

10 Flower drive
Continued flowering and flower development.

11 Late flower
Late flowering and maturation.

12 Ripening
Maturation and preparation for final settings.

13 Trichome start
Final stage: focus on trichomes and resin.

14 Trichome boost
Final stage: quality, aroma and maturity.

15 Finish
End of the cycle: maturation and final quality.

Profile names and purposes follow the current PARO presentation.

TWO GREEN VARIANTS
23% and 36% Green each offer 15 profiles, but their LED channel bases and green-light shares differ. Identical numbering does not mean identical spectra.

CHOOSE YOUR PROFILE
The SPECTRUM knob on Basic, Pro and Ultra selects the profile; DIMMING adjusts power. The separate Wireless controller selects profiles in a compatible installation.

Profile 03 may be reused near the end of the cycle to support trichomes.

Spectral profile selection and FST operating mode are separate settings.

TECHNICAL PARAMETERS

**TWO DESIGNS. MULTIPLE CONFIGURATIONS.
ONE PARO PLATFORM.**

SQUARE



SLIM / GREENHOUSE



Images show example designs, not every power variant.

PARAMETER	PARO SQUARE	PARO SLIM
Design	Modular, multi-bar	Elongated, modular
Application	Growbox / indoor	Greenhouses / long growing zones
Rated power	600 / 800 / 1000 / 1200 / 1500 / 1800 W	600 / 800 / 1000 / 1200 / 1500 / 1800 W
Green Spectrum	23% / 36%[1]	23% / 36%[1]
Driver versions	Basic / Pro / Ultra[1]	Basic / Pro / Ultra[1]
Adjustment / profiles	DIMMING 10-100% / 15 profiles	DIMMING 10-100% / 15 profiles
PPE - 23% product cards	3.1 µmol/J[2]	3.1 µmol/J[2]
Dimensions	1.10 × 1.10 m[3]	By power and design[4]

[1] Variants shown on the website; confirm the specific power, spectrum and driver combination during selection. [2] Declared on 23% Green product cards, not a measurement of every configuration.

[3] SQUARE dimension marked as known in the active configurator. [4] SLIM: 600/800 W - 1000 × 240 mm; 1000 W - 1140 × 240 mm; 1200 W S2 - 1340 × 240 mm; 1500 W S3 - 1140 × 346 mm; 1800 W S3 - 1340 × 346 mm.

CONFIGURE TODAY. UPGRADE TOMORROW.

Match design, power, spectrum and control level to the installation. Upgrade Basic to Pro or Ultra by fitting a driver compatible with the model.

13 / MODEL DATA

PARO SQUARE

TECHNICAL SPECIFICATIONS

SIX POWER OPTIONS.
TWO SPECTRUM CONFIGURATIONS.
THREE CONTROL LEVELS.



Example construction shown.

SQUARE / INDOOR

Six PARO platform models - parameters and available configurations.

PARAMETER	600 W	800 W	1000 W	1200 W	1500 W	1800 W
Rated power	600 W	800 W	1000 W	1200 W	1500 W	1800 W
LED count	2544	3392	4240	5088	7560	9072
LED bar count	6	8	10	12	10	12
Dimensions [cm]	110 × 110 × 6	110 × 110 × 6	110 × 110 × 6	110 × 110 × 6	110 × 110 × 6	110 × 110 × 6
Weight [kg]	9	11	12	15	—	—
AC input [V]	100–277	100–277	100–277	100–277	100–277	100–277
Frequency [Hz]	50–60	50–60	50–60	50–60	50–60	50–60
DIMMING [%]	10–100	10–100	10–100	10–100	10–100	10–100
Service life [h][1]	≥50 000	≥50 000	≥50 000	≥50 000	≥50 000	≥50 000
PPE [µmol/J][2]	3.1	3.1	3.1	3.1	3.1	3.1

— Parameter to be confirmed. 1500 and 1800 W dimensions confirmed by PaRo.

[1] Manufacturer declaration. [2] PPE declared on 23% Green cards; not a measurement of every 36% configuration, profile or mode. PPF omitted: the available calculation is not a laboratory measurement.

23% / 36% GREEN

Both spectrum variants in the SQUARE family.
Identical total LED counts for both variants.

BASIC / PRO / ULTRA

Three control versions. 15 spectral profiles.
Match the driver to the model and configuration.

Confirm availability of the specific power, spectrum and driver combination when ordering.

14 / MODEL DATA

PARO SLIM

TECHNICAL SPECIFICATIONS

SIX POWER OPTIONS.
TWO SPECTRUM CONFIGURATIONS.
THREE CONTROL LEVELS.



Example construction shown.

SLIM / GREENHOUSE

Six power options. 1200 W: choose S2 or S3 construction.

PARAMETER	600 W	800 W	1000 W	1200 W S2	1200 W S3	1500 W	1800 W
Rated power [W]	600	800	1000	1200	1200	1500	1800
LED count	2544	3392	4240	5088	5088	7560	9072
Design	S2	S2	S2	S2	S3	S3	S3
Structural bars	2	2	2	2	3	3	3
Length [mm]	1000	1000	1140	1340	1000	1140	1340
Width [mm]	240	240	240	240	346	346	346
Height [mm]	—	—	—	—	—	—	—
Weight [kg]	—	12	13	—	18	—	—
DIMMING [%]	10–100	10–100	10–100	10–100	10–100	10–100	10–100
PPE [µmol/J][1]	3.1	3.1	3.1	3.1	3.1	3.1	3.1

— Value to be confirmed. S2 = two structural bars; S3 = three. The 18 kg weight applies only to SLIM 1200 W S3.

[1] PPE: declared on 23% Green cards, not measured for every configuration. Input and service-life data for current versions are unconfirmed and omitted. Calculated PPF is not presented as a measurement.

23% / 36% GREEN

Both spectrum variants in the SLIM family.
Identical total LED counts for both variants.

BASIC / PRO / ULTRA

Three control versions. 15 spectral profiles.
Match the driver to the model and configuration.

Confirm availability of the specific power, spectrum and driver combination when ordering.

PARO SYSTEM ASSEMBLY

MODULAR DESIGN. PRECISE INSTALLATION.

SQUARE - assembly of the construction shown in the manufacturer instructions.
Documentation images show the steps, not every power and driver variant.

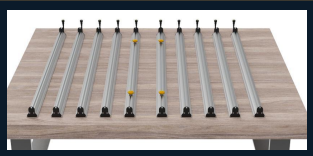

01 PREPARE THE COMPONENTS

Place the LED bars and structural components on a flat, stable surface. Keep power disconnected throughout assembly.



02 FIT THE FIRST FRAME PROFILE

Unscrew the yellow fasteners securing the profile. Align the bars with their mounts: each bar must sit between two spacers.

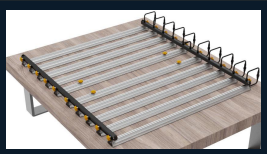

03 COMPLETE THE FRAME

Fit the second mounting profile. Keep the bars between the spacers and check that all mechanical connections are secure.

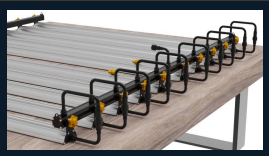

04 LED CONNECTIONS

Connect the 3-pin LED cables according to the instructions and the connectors fitted to the light. Do not modify the electrical installation yourself.

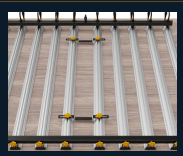

05 DRIVER BRACKETS

For the construction shown, attach the driver housing brackets to the two central bars. Use components compatible with this version.



06 HANG THE LIGHT AND FIT THE DRIVER

First, securely suspend the light using suitably rated supports. Then seat the driver on its brackets and connect the 3-pin LED cable.



07 PRE-START CHECK

Check the mounts, stability and all connections. Allow space for airflow. Connect according to the instructions for the specific version.

MODULARITY WITHOUT REPLACING THE LIGHT

The LED structure remains the foundation of the system. A compatible Basic / Pro / Ultra driver can be replaced to match the light model. Wireless Control is a separate, optional controller.

Disconnect power before work. Use appropriate mounts and compatible components.
This overview does not replace the full assembly instructions for the specific variant.

16 / SQUARE / SLIM - SAFE OPERATION

SAFETY AND MAINTENANCE

PROFESSIONAL OPERATION.
LASTING RELIABILITY.

Basic operating guidelines for both PARO lighting families.
Follow the instructions for the model and driver version.

01

ELECTRICAL SAFETY

• Switch off and disconnect power before maintenance. Never work on energised equipment.

• Check cables and connections. Use compatible drivers and correct electrical connections.

• Do not open components or carry out internal modifications or repairs yourself.

02

OPTICAL SAFETY

• Do not look directly at operating LEDs. The lights emit intense light.

• PARO configurations include UV and IR channels. Low visibility does not indicate LED failure.

• Switch off and disconnect the light before working on it. Use the device only as intended.

03

TEMPERATURE AND VENTILATION

• Allow airflow. Do not cover heatsinks or other heat-dissipating components.

• Position the driver to allow cooling. Avoid sources of excessive heat and steam.

• Monitor ambient temperature. LED, frame-profile and driver temperatures differ from ambient conditions.

04

MAINTENANCE AND CLEANING

• Switch off, disconnect power and allow the light to cool.

• Gently remove dust with a dry cloth, following the instructions. Do not pour or spray water over the device.

• Check cables, connectors and mounts periodically. Do not dismantle the device for cleaning.

DRIVER, INSPECTIONS AND DOCUMENTATION

Select Basic / Pro / Ultra to match the specific light. Disconnect power before replacement and follow the instructions. Wireless Control is a separate controller, not a driver.

SLIM is supplied as an assembled structure with its driver. The manual for the specific version defines full operation and servicing requirements. Contact PARO support if a fault occurs.

PaRo

TECHNOLOGIES

CONTACT AND PARTNERSHIPS

LIGHTING TECHNOLOGY.
TAILORED SOLUTIONS.
PROFESSIONAL PARTNERSHIPS.

LET'S DISCUSS YOUR INSTALLATION

We invite B2B customers and partners to work with the PARO Technologies team. We prepare tailored commercial offers and help select lighting configurations for professional indoor and greenhouse installations.

Contact us to discuss your project needs, available configurations and order.

SALES CONTACT

Paweł Rożnowski

PaRo Technologies

Siemianowice Śląskie, Poland

roznowski@protonmail.com

+48 787 259 751

paro-lampa.pl

DISCOVER PARO TECHNOLOGIES